


## Interior trims

### Removing and installing rear seat bench

#### Removing

- Raise rear seat bench -1- and pull out rear seat bench -1- towards front.
- With seat heating: Unplug connector.

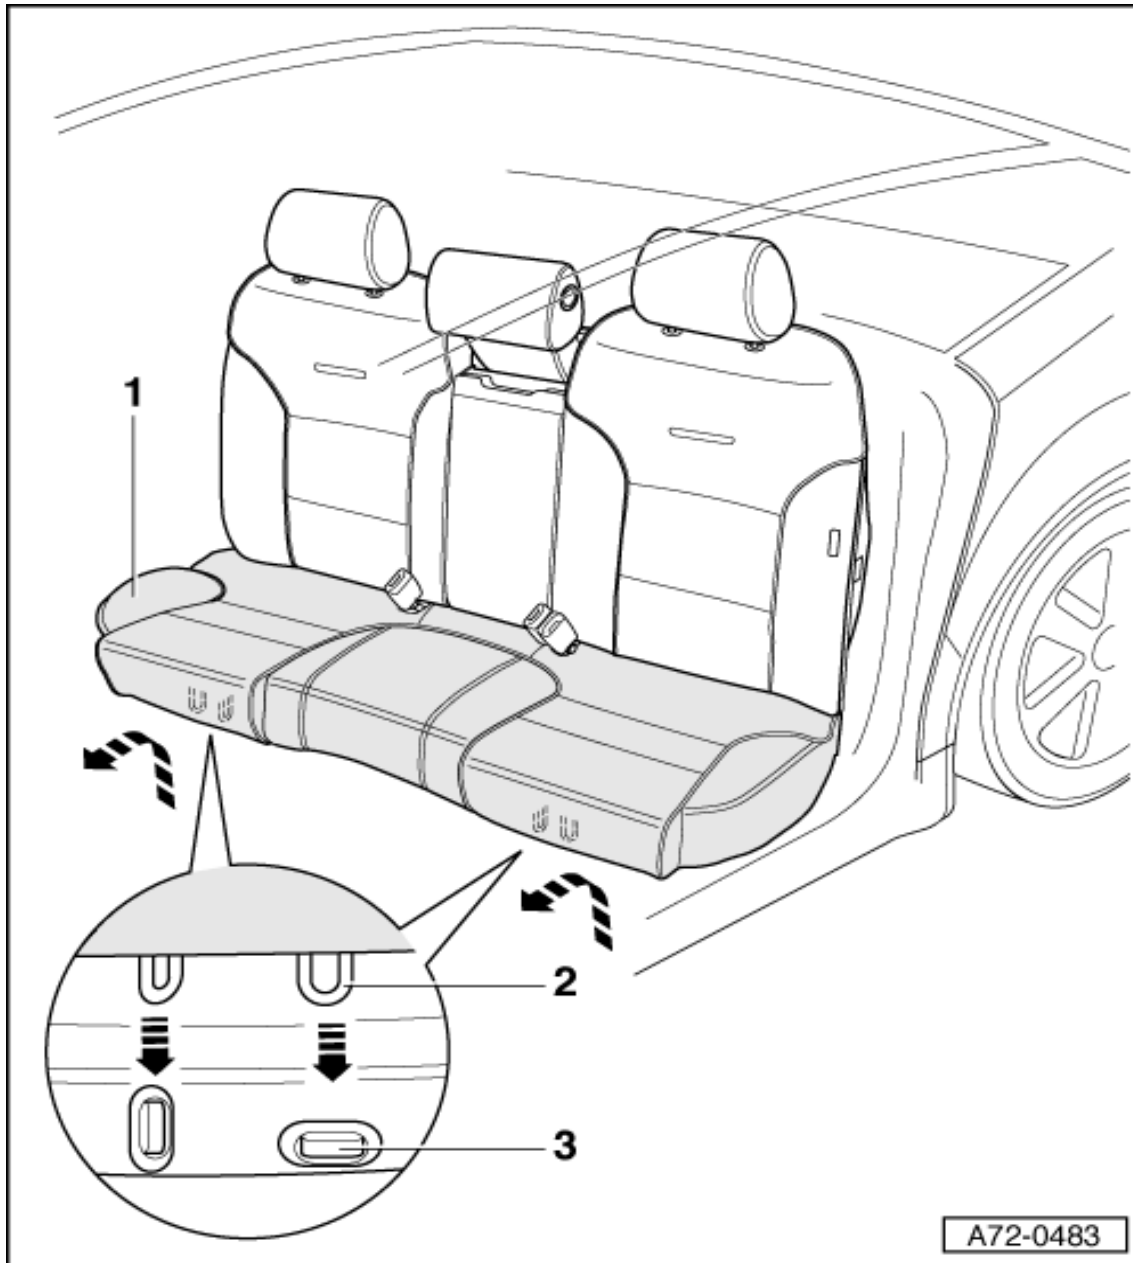

#### Installing Caution:

# Interior trims

The Audi A8 manual states that retainers must be renewed whenever you have removed the rear seat bench in practise they are usually ok

[Follow the rest of the guide here](#)

Unique solution ID: #1050

Author: Nick

Last update: 2013-03-09 09:07