

Coding

DVD navigation eject lock - can't eject nav disk

you need vcds to do this

The eject lock is a safety feature to prevent disks from being stolen

DVD navigation eject lock:

[37 - Navigation]

[Adaptation - 10] -> Channel 68

0 = button active

1 = button inactive (anti-theft)

[http://wiki.ross-tech.com/index.php/Audi_A4_\(8K\)_Navigation](http://wiki.ross-tech.com/index.php/Audi_A4_(8K)_Navigation)

Unique solution ID: #1009

Author: Nick

Last update: 2013-02-19 18:41