

Coding

how do I enable the needle sweep

You need vcds / vagom to do this

Enabling Gauge Test/Needle Sweep:

This will sweep the gauge needles through their full range automatically when you start the engine.

[17 - Instruments]

[Coding - 07] -> Long Coding Helper -> Byte 1

Bit 0 - Check the box for "Gauge Test/Needle Sweep active"

[see other vcds codings](#)

Unique solution ID: #1003

Author: Nick

Last update: 2013-02-19 10:24